



Uninterruptible Power Supply

1/2/3 kVA

Single Phase, On-Line Double Conversion
(Universal Tower / Rack Mount)



UNISTAR[®] V

USER MANUAL

Table of Contents

1. Important Safety Warnings.....	3
1-1. Transportation	3
1-2. Preparation	3
1-3. Installation.....	3
1-4. Operation.....	3
1-5. Maintenance, service and faults	4
2. Installation and setup.....	5
2-1 Rear panel view.....	5
2-2. Operating principle.....	7
2-3. Install the UPS.....	7
2-4. Setup the UPS	9
2-5 Battery Replacement	11
2-6 Battery Kit Assembly (option)	12
3. Operation	14
3-1. Button operation.....	14
3-2. LCD Panel	15
3-3. Audible Alarm	16
3-4. LCD display wordings index	16
3-5. UPS Settings.....	17
3-6. Operating Mode Description.....	19
3-7. Faults Reference Code	20
3-8. Warning indicator	21
4. Troubleshooting.....	21
5. Storage and Maintenance.....	23
6. Specifications	24
Battery Pack Specification	26

1. Important Safety Warnings

Please strictly comply with all warnings and operating instructions in this manual. Save this manual and carefully read the following instructions before installing the unit. Do not operate this unit before reading through all safety information and operating instructions carefully.

1-1. Transportation

- Transport the UPS system only in the original package to protect against shock and impact.

1-2. Preparation

- Condensation may occur if the UPS system is moved directly from cold to warm environment. The UPS system must be absolutely dry before being installed. Please allow at least two hours for the UPS system to acclimate to the environment.
- Do not install the UPS system near water or in moist environments.
- Do not install the UPS system where it would be exposed to direct sunlight or near a heater.
- Do not block ventilation holes in the UPS housing.

1-3. Installation

- Do not connect appliances or devices which would overload the UPS system (e.g. laser printers) to the UPS output sockets.
- Place cables in such a way that no one can step on or trip over them.
- Do not connect domestic appliances such as hair dryers to UPS output sockets.
- The UPS can be operated by individuals with no previous experience.
- The UPS can be operated in TN&TT power distribution.
- Connect the UPS system only to an earthed shockproof outlet which must be easily accessible and close to the UPS system.
- Please use only UL-tested, UL-marked power cables to connect the loads to the UPS system.
- When installing the equipment, ensure that the sum of the leakage current of the UPS and the connected devices does not exceed 3.5mA.
- Temperature Rating - Units are considered acceptable for use in a maximum ambient of 40°C (104°F).
- For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- CAUTION: The unit is heavy. Lifting the unit requires a minimum of two people.

1-4. Operation

- Do not disconnect the mains cable on the UPS system or the building wiring outlet (shockproof socket outlet) during operations since this would cancel the protective earth of the UPS system and of all connected loads.
- The UPS system features its own internal current source (batteries). The UPS output sockets or output terminal blocks may be electrically live even if the UPS system is not connected to the building wiring outlet.
- In order to fully disconnect the UPS system, first press the OFF/Enter button and

disconnect the mains.

- Prevent fluids or other foreign objects from getting inside the UPS system.
- The EPO, RS-232 and USB circuits are IEC 60950 safety extra low voltage (SELV) circuits. This circuit must be separated from any hazardous voltage circuits by reinforced insulation.

1-5. Maintenance, service and faults

- The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.
- **Caution** - risk of electric shock. Even after the unit is disconnected from the mains (building wiring outlet), components inside the UPS system are still connected to the battery and electrically live and dangerous.
- Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capability capacitors such as BUS-capacitors.
- To avoid electrical shock, turn off the unit and unplug it from the AC power source before servicing the battery.
- Only persons that are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.
- **Caution** - risk of electric shock. The battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground. Before touching, verify that no voltage is present!
- When changing batteries, install the same number and same type of batteries.
- Do not attempt to dispose of batteries by burning them. This could cause battery explosion.
- Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.
- When replacing batteries, replace with the same type and number of batteries or battery packs.

Manufacturer	Type	Rated
Toplite (Guangzhou) Technology Battery Co Ltd (MH29104)	NPW45-12	12 V dc, 9.0 Ah
	NPW45-12 FR	12 V dc, 7.0 Ah
	NPW36-12	12 V dc, 7.2 Ah
	NPW36-12 FR	12 V dc, 7.0 Ah
CSB Battery Co Ltd (MH14533)	UPS 12360 7 FR	12 V dc, 7.1 Ah
	UPS 12460 F2FR	12 V dc, 9.0 Ah
	HR 1234W FR	12 V dc, 8.5 Ah
Yuasa Battery (Guangdong) Co Ltd (MH29616)	NPW45-12	12 V dc, 8.0 Ah
	NPW45-12FR	12 V dc, 8.0 Ah

- Do not dismantle the UPS system.
- A battery can present a risk of electrical shock and high short-circuit current. The following precautions should be observed when working on batteries:
 - a) Remove watches, rings, or other metal objects.
 - b) Use tools with insulated handles.
 - c) Wear rubber gloves and boots.
 - d) Do not lay tools or metal parts on top of batteries.

- e) Disconnect charging source prior to connecting or disconnecting battery terminals.
- f) Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance.

2. Installation and setup


NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. Please keep the original package in a safe place for future use.

NOTE: There are two different types of online UPS: standard and long-run models. Please refer to the following model table.


Model No.	Type	Model No.	Type
SCV-1000x	Standard Model	SCV-1000x-LB	Long-run Model
SCV-2000x		SCV-2000x-LB	
SCV-3000x		SCV-3000x-LB	

2-1 Rear panel view


1 kVA

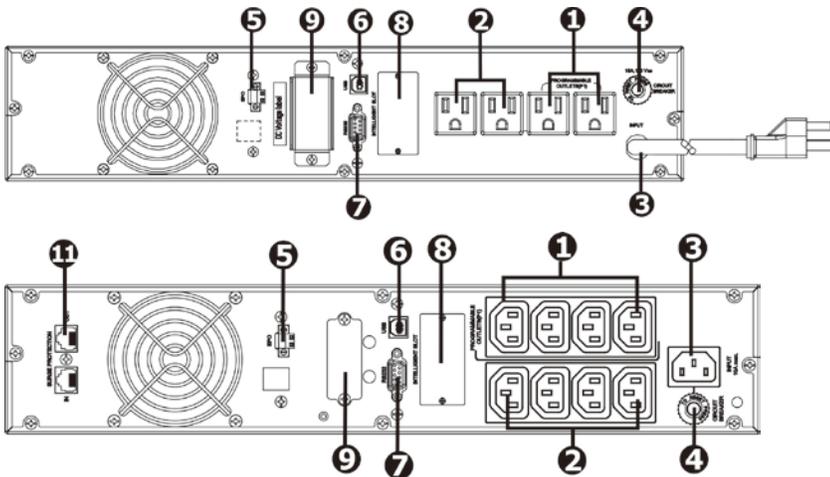

2 kVA

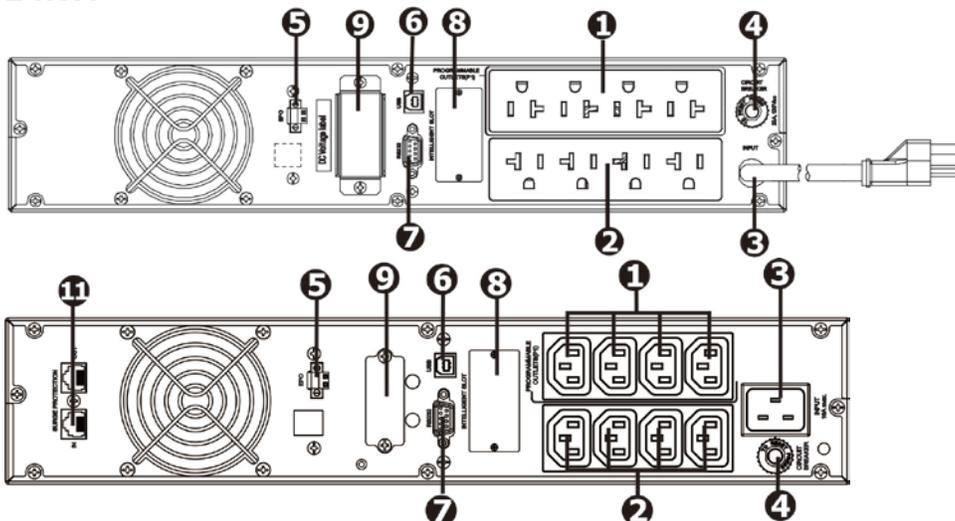


3 kVA

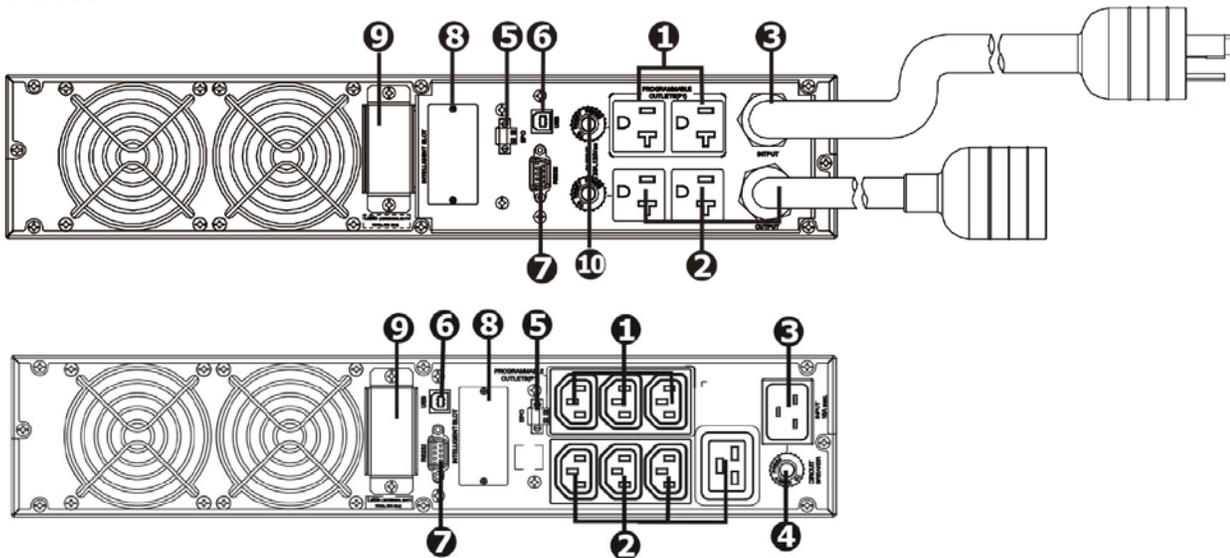

1. Programmable outlets: connect to non-critical loads.
2. Output receptacles: connect to mission-critical loads.
3. AC input
4. Input circuit breaker
5. Emergency power off function connector (EPO)
6. USB communication port
7. RS-232 communication port
8. SNMP intelligent slot
9. External battery connector
10. Output circuit breaker
11. Modem/phone/network surge protection

2-2. Operating principle

The operating principle of the UPS is shown as below.

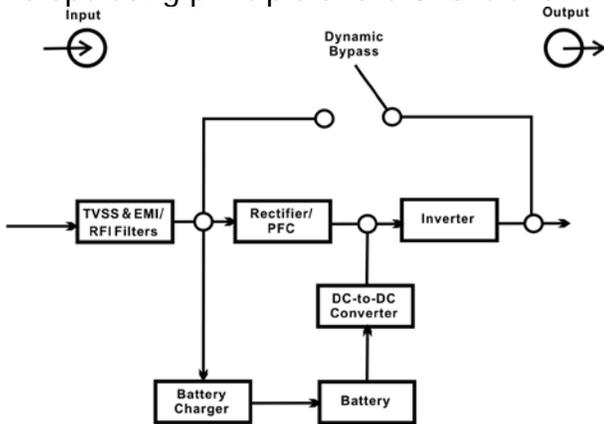


The UPS is composed of mains input, TVSS and EMI/RFI filters, rectifier/PFC, inverter, battery charger, DC-to-DC converter, battery, dynamic bypass and UPS output.

2-3. Install the UPS


For safety consideration, the UPS is shipped out from factory without connecting battery wires. Before installing the UPS, please follow the below steps to re-connect battery wire.

Step 1

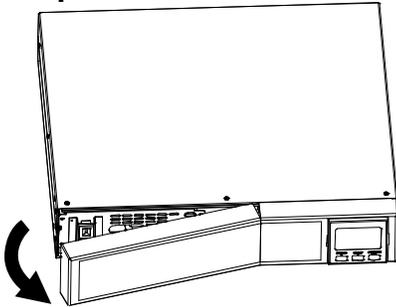


Remove front panel.

Step 2

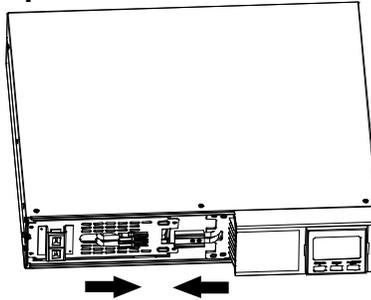

Remove battery panel and re-connect battery wire.

Step 3

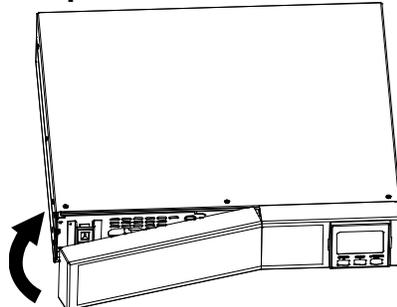



Put battery panel and cover back to the unit.

This UPS can be either displayed on the desk or mounted in the 19" rack chassis. Please choose proper installation to position this UPS.


Rack-mount Installation

CAUTION – Do NOT use the mounting brackets to lift the unit. The mounting brackets are only for securing the unit to the rack.


Install UPS alone

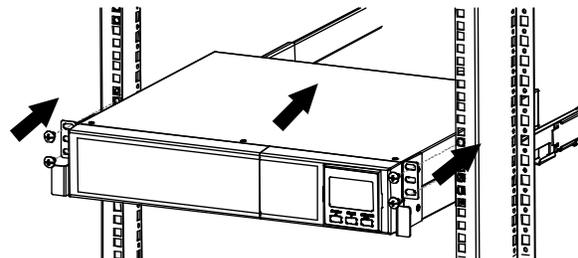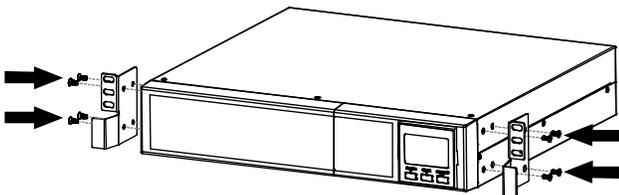


Install UPS and external battery

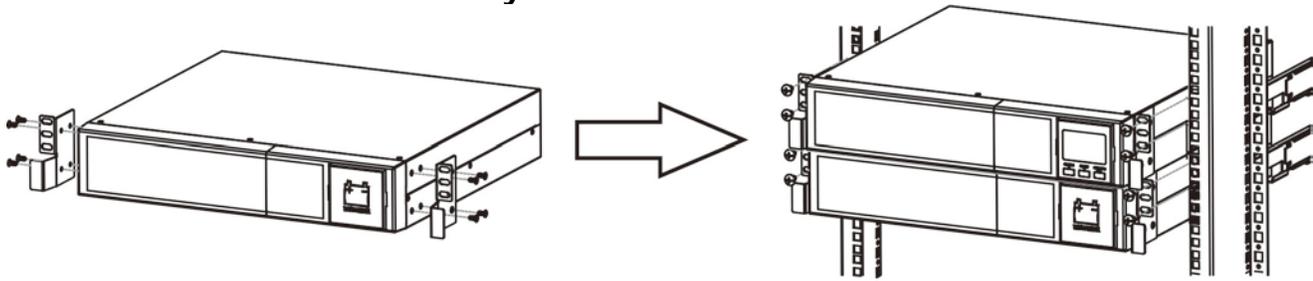


Tower Installation Install UPS alone

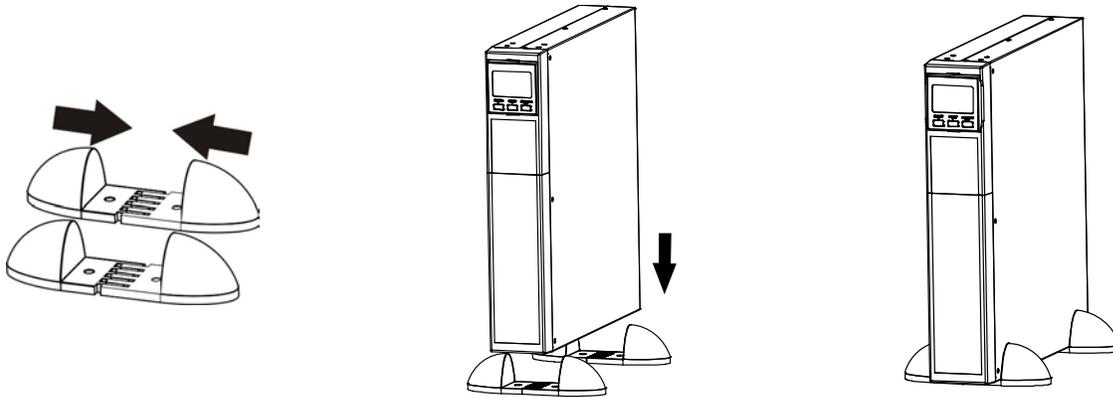

Install UPS and external battery

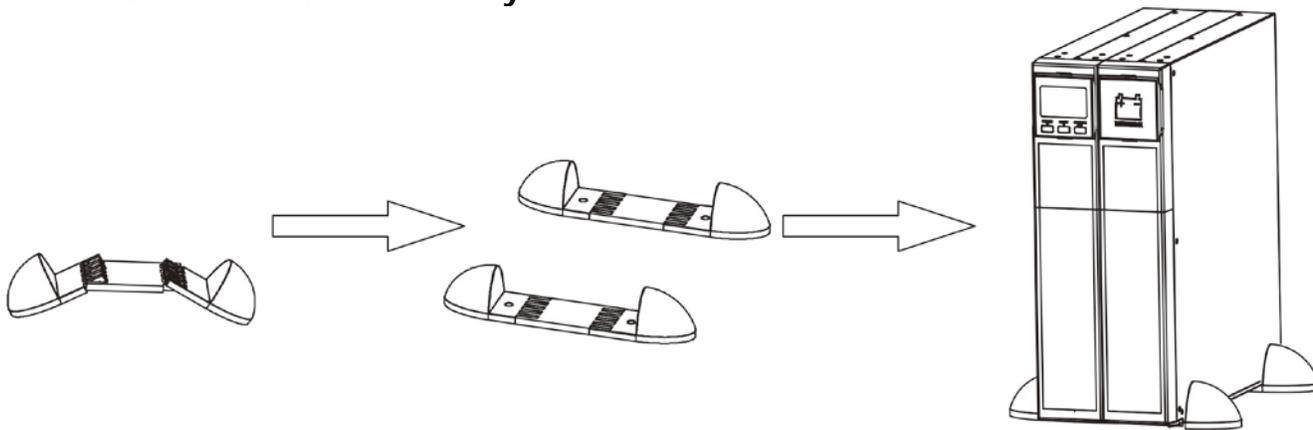

NOTE: When installing the UPS or battery pack with feet, keep 2.76in distance from the edge of the unit.

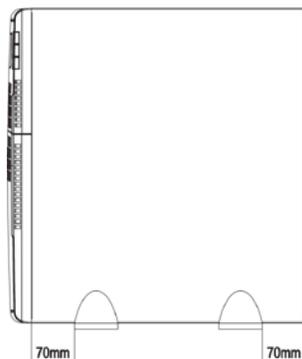

2-4. Setup the UPS

Step 1: UPS input connection

Plug the UPS into a two-pole, three-wire, grounded receptacle only. Avoid using extension cords.

CAUTION: For 1 and 2 kVA models, to reduce the risk of fire, connect only to a circuit provided with 20 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70.

CAUTION: For 3 kVA models, to reduce the risk of fire, connect only to a circuit provided with 30 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70.

Step 2: UPS output connection

There two kinds of outputs: programmable outlets and general outlets. Connect non-critical devices to the programmable outlets and critical devices to the general outlets. During power failure, you may extend the backup time to critical devices by setting shorter backup time for non-critical devices.

 
Step 3: Communication connection

Communication port:

USB port



RS-232 port



Intelligent slot



To allow for unattended UPS shutdown/start-up and status monitoring, connect one end of the communication cable to the USB/RS-232 port and the other end to the communication port of your PC. With the monitoring software installed, you can schedule UPS shutdown/start-up and monitor UPS status through PC.

The UPS is equipped with an intelligent slot perfect for either a SNMP or an AS400 card. Installing either a SNMP or AS400 card in the UPS will provide advanced communication and monitoring options.

NOTE: USB port and RS-232 port can't work at the same time.

Step 4: Network connection


Network/Fax/Phone surge port



Connect a single modem/phone/fax line into surge-protected "IN" outlet on the back panel of the UPS unit. Connect from "OUT" outlet to the equipment with another modem/fax/phone line cable.

Step 5: Disable and enable EPO function


Keep pin 1 and pin 2 closed for UPS normal operation. To activate EPO function, cut the wire between pin 1 and pin 2.

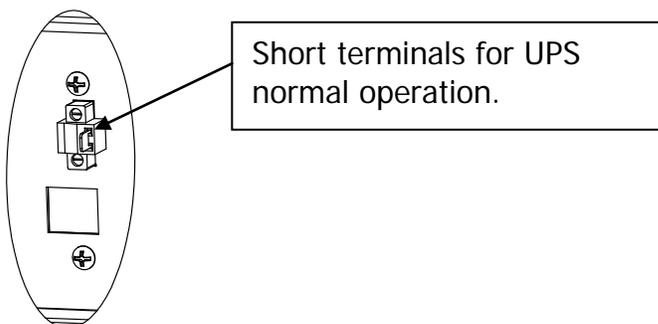

Step 6: External battery connection

Connect one end of external battery cable to UPS unit and the other end to battery pack. See below chart for detailed connection.

CAUTION: Connection to External Battery shall be installed by SERVICE PERSONNEL only.

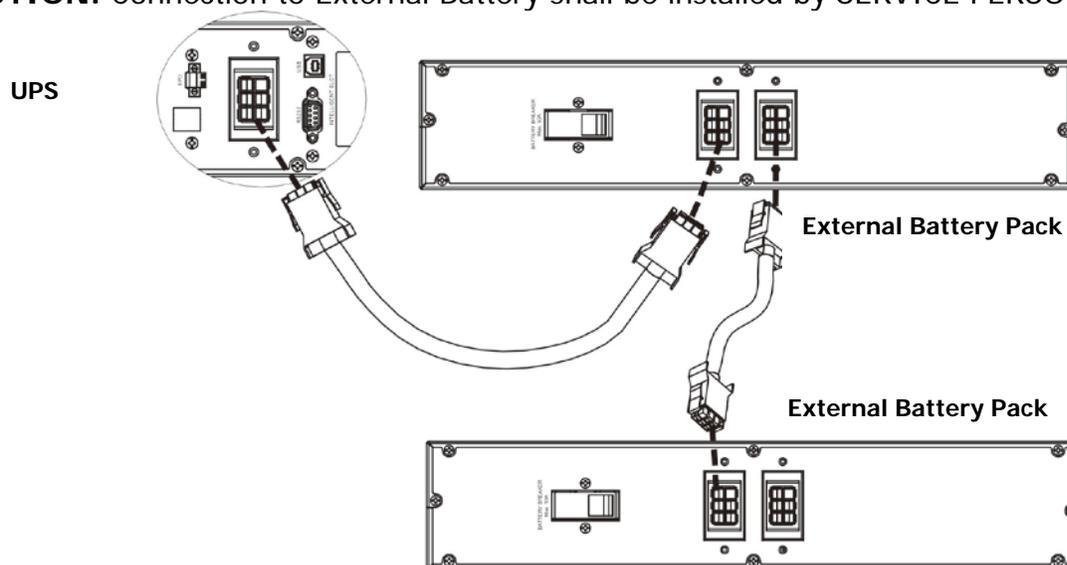

CAUTION – Risk of fire hazard.

Step 7: Turn on the UPS

Press the ON/Mute button on the front panel for two seconds to power on the UPS.

Note: The battery charges fully during the first five hours of normal operation. Do not expect full battery run capability during this initial charge period.

Step 8: Install software

Install UPS monitoring software to fully configure UPS shutdown. Follow the steps below to download and install monitoring software:

1. Go to the website <http://www.power-software-download.com>
2. Click ViewPower software icon and then choose your required OS to download the software.
3. Follow the on-screen instructions to install the software.

4. When your computer restarts, the monitoring software will appear as an orange plug icon located in the system tray, near the clock.


2-5 Battery Replacement

NOTICE: This UPS is equipped with internal batteries and only service personnel can replace the batteries.

CAUTION!! Consider all warnings, cautions, and notes before replacing batteries.


NOTE: Upon battery disconnection, equipment is not protected from power outages.

Step 1

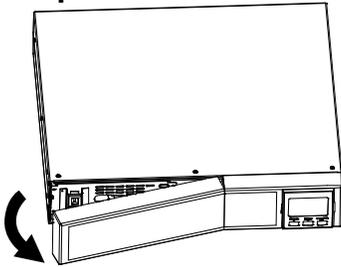


Remove front panel.

Step 2

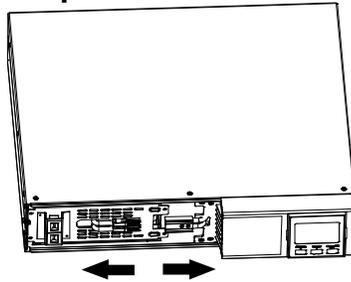


Disconnect battery wire and remove battery panel.

Step 3

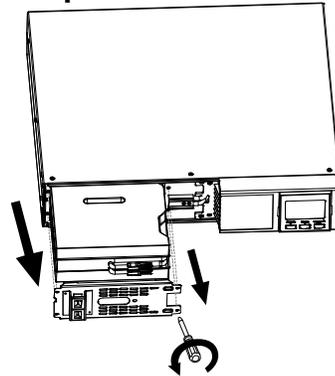


Pull out the battery box.

Step 4

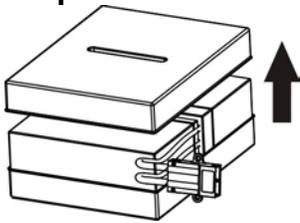


Remove the top cover of battery box and replace the inside batteries.

Step 5

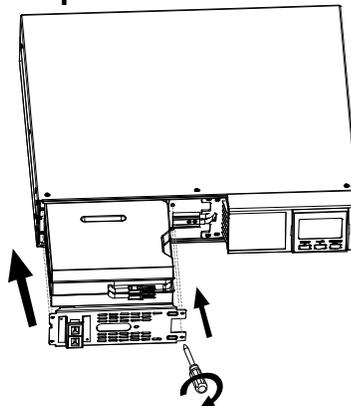


After replacing the batteries, put the battery box back to original location and screw in tightly.

Step 6

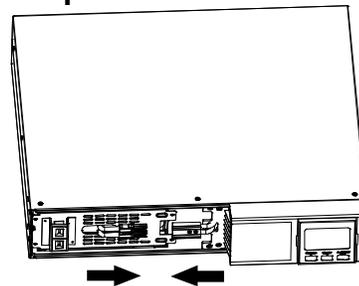

Re-connect the battery wire and screw battery panel back on the unit.

Step 7

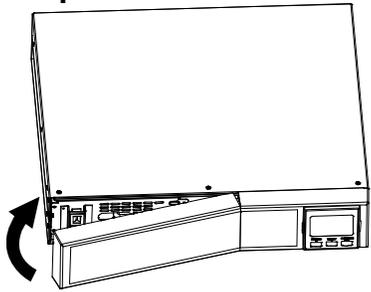

Put the front panel back on the unit.


2-6 Battery Kit Assembly (option)

NOTICE: Replacement battery pack comes fully assembled from the factory. Consult factory for details.


2-battery kit – 1 kVA

Step 1: Remove adhesive tapes.


Tapes

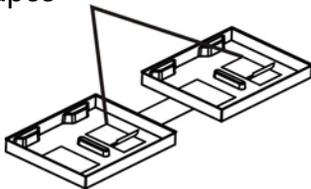


Step 3: Put assembled battery packs on one side of plastic shells.

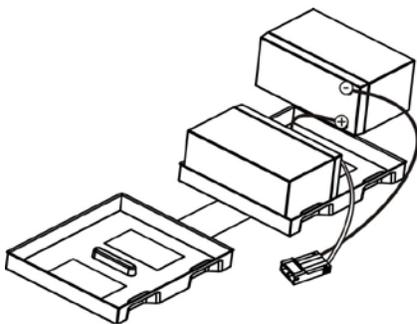

Step 2: Connect all battery terminals by following below picture.

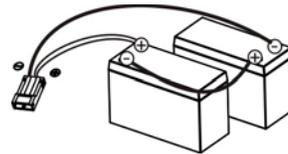


Step 4: Cover the other side of plastic shell as shown below. Then, battery kit is fully assembled.

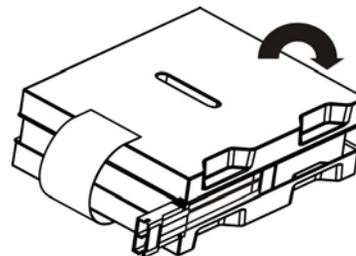

4-battery kit – 2 kVA


Step 1: Remove adhesive tapes.

Tapes

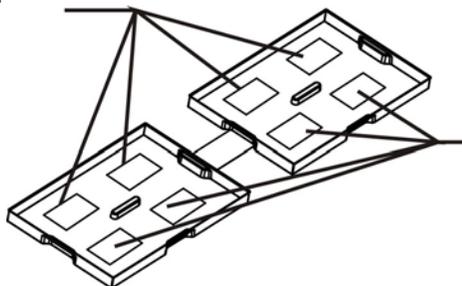


Tapes


Step 2: Connect all battery terminals by following below picture.

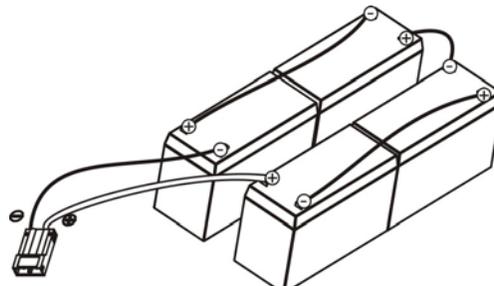

Step 3: Put assembled battery packs on one side of plastic shells.

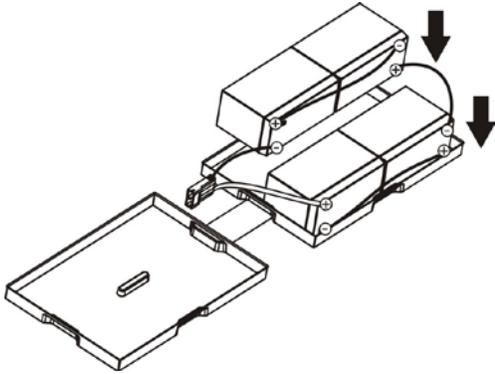


Step 4: Cover the other side of plastic shell as shown below. Then, battery kit is fully assembled.

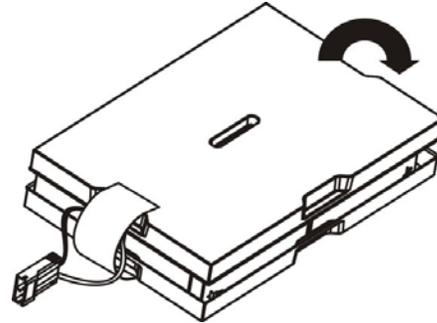


6-battery kit – 3 kVA


Step 1: Remove adhesive tapes.

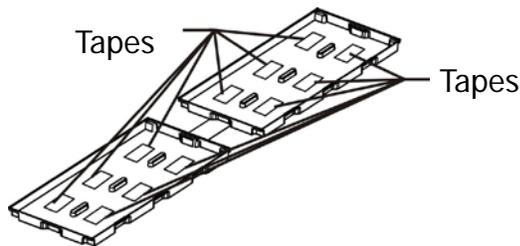


Step 2: Connect all battery terminals by following below picture.

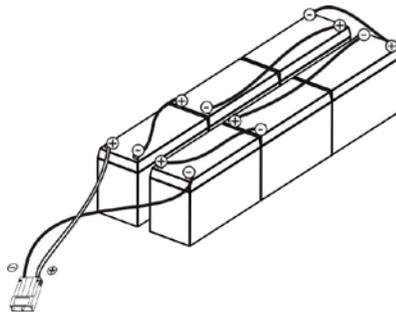

Step 3: Put assembled battery packs on one side of plastic shells.

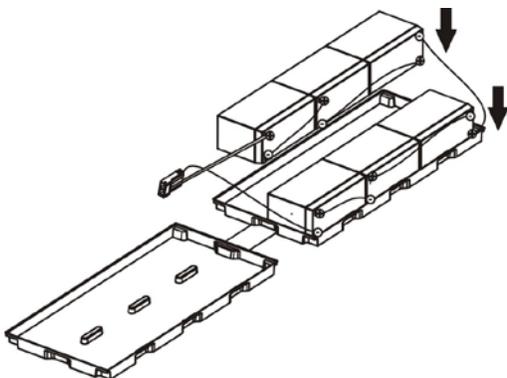

Step 4: Cover the other side of plastic shell as shown below. Then, battery kit is fully assembled.

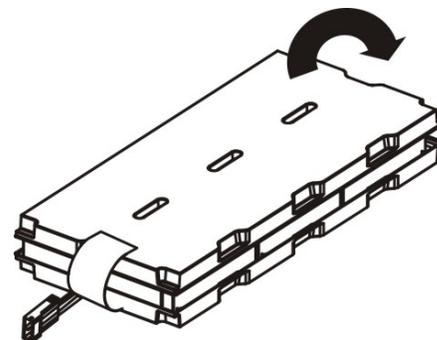


3. Operation

3-1. Button operation




Button	Function
ON/Mute Button	<ul style="list-style-type: none">➤ Turn on the UPS: Press and hold ON/Mute button for at least 2 seconds to turn on the UPS.➤ Mute the alarm: After the UPS is turned on in battery mode, press and hold this button for at least 5 seconds to disable or enable the alarm system.➤ Up key: Press this button to display previous selection in UPS setting mode.➤ Switch to UPS self-test mode: Press ON/Mute button for 5 seconds to enter UPS self-testing while in AC mode, ECO mode, AECO mode, or converter mode.
OFF/Enter Button	<ul style="list-style-type: none">➤ Turn off the UPS: Press and hold this button at least 2 seconds to turn off the UPS in battery mode. UPS will be in standby mode under power normal or transfer to bypass mode if the Bypass is enabled.➤ Confirm selection key: Press this button to confirm selection in UPS setting mode.
Select Button	<ul style="list-style-type: none">➤ Switch LCD message: Press this button to change the LCD message for input voltage, input frequency, battery voltage, output voltage, output frequency.➤ Setting mode: Press and hold this button for 5 seconds to enter UPS setting mode when in Standby and Bypass mode.➤ Down key: Press this button to display next selection in UPS setting mode.
ON/Mute + Select Button	<ul style="list-style-type: none">➤ Switch to bypass mode: When the main power is normal, press ON/Mute and Select buttons simultaneously for 5 seconds. UPS will enter bypass mode. This action will be ineffective when the input voltage is out of acceptable range.

3-2. LCD Panel

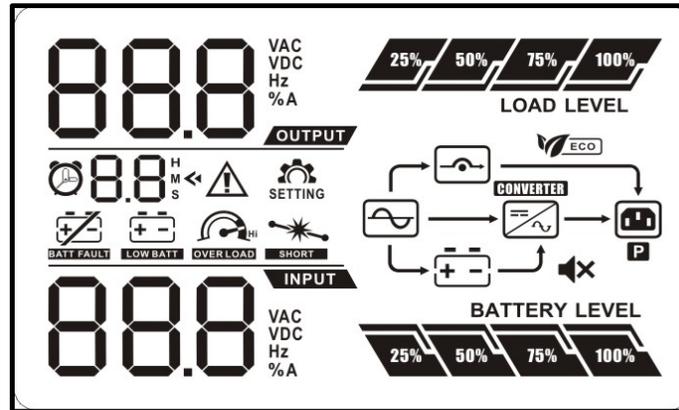

Display	Function
Remaining backup time information	
	Indicates the remaining backup time in pie chart.
	Indicates the remaining backup time in numbers. H: hours, M: minute, S: second
Fault information	
	Indicates that warning and fault occurred.
	Indicates the warning and fault codes. The codes are listed in detail in section 3-5.
Mute operation	
	Indicates that the UPS alarm is disabled.
Output & Battery voltage information	
	Indicates the output voltage, frequency or battery voltage. Vac: output voltage, Vdc: battery voltage, Hz: frequency
Load information	
	Indicates the load level by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates overload.
	Indicates the load or the UPS output is short circuit.
Mode operation information	
	Indicates the UPS is connected to the mains.
	Indicates the battery is working.
	Indicates the bypass circuit is working.
	Indicates the ECO mode is enabled.
	Indicates the Inverter circuit is working.
	Indicates the output is working.
Programmable outlets information	
	Indicates that programmable outlets have output voltage.

 Battery information	
	Indicates the Battery level by 0-25%, 26-50%, 51-75%, and 76-100%.
	Indicates the battery is at fault.
	Indicates low battery level and low battery voltage.
Input & Battery voltage information	
	Indicates the input voltage or frequency or battery voltage. Vac: Input voltage, Vdc: battery voltage, Hz: input frequency


3-3. Audible Alarm

Battery Mode	Sounding every 4 seconds
Low Battery	Sounding every second
Overload	Sounding twice every second
Fault	Continuously sounding

3-4. LCD display wordings index

Abbreviation	Display content	Meaning
ENA	ENR	Enable
DIS	d IS	Disable
ESC	ESC	Escape
HLS	HLS	High loss
LLS	LLS	Low loss
BAT	bAt	Battery
CF	CF	Converter
TP	tP	Temperature
CH	CH	Charger
SF	SF	Site Fault
EP	EP	EPO
FU	FU	Bypass frequency unstable
EE	EE	EEPROM error

3-5. UPS Settings

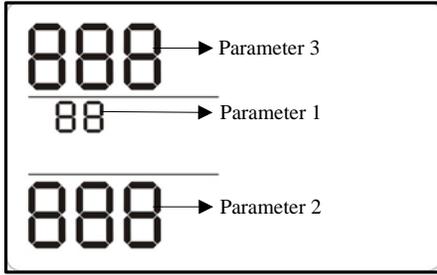

There are three parameters to set up the UPS.

Parameter 1: Program alternatives. Refer to below table.

Parameter 2 and Parameter 3 are the setting options or values for each program.

● 01: Output voltage setting

Interface	Setting
	<p>For 200/208/220/230/240 VAC models, you may choose the following output voltage:</p> <p>200: presents output voltage is 200Vac 208: presents output voltage is 208Vac 220: presents output voltage is 220Vac 230: presents output voltage is 230Vac 240: presents output voltage is 240Vac</p> <p>For 100/110/115/120VAC models, you may choose the following output voltage:</p> <p>100: presents output voltage is 100Vac 110: presents output voltage is 110Vac 115: presents output voltage is 115Vac 120: presents output voltage is 120Vac</p>

● 02: Frequency Converter enable/disable

Interface	Setting
	<p>CF ENA: converter mode enable CF DIS: converter mode disable(Default)</p>

● 03: Output frequency setting

Interface	Setting
	<p>You may set the initial frequency on battery mode:</p> <p>BAT 50: presents output frequency is 50Hz BAT 60: presents output frequency is 60Hz</p> <p>If converter mode enable, you may choose the following output frequency:</p> <p>CF 50: presents output frequency is 50Hz CF 60: presents output frequency is 60Hz</p>

- 04: ECO enable/disable

Interface	Setting
	ENA: ECO mode enable DIS: ECO mode disable(Default)

- 05: AECO enable/disable

Interface	Setting
	ENA: Advanced ECO mode enable DIS: Advanced ECO mode disable(Default)

- 06: Bypass mode enable/disable when UPS is off

Interface	Setting
	ENA: Bypass mode is enabled when UPS is off DIS: Bypass mode is disabled when UPS is off (Default)


- 07: Programmable outlets enable/disable

Interface	Setting
	ENA: Programmable outlets enable DIS: Programmable outlets disable(Default)

- 08: Programmable outlets setting




Interface	Setting
	0-999: setting the backup time limits in minutes from 0-999 for programmable outlets which connect to non-critical devices on battery mode.

- 09: Acceptable input voltage range setting

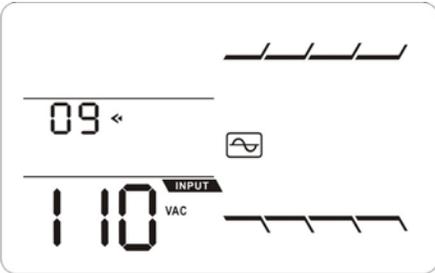Interface	Setting
	<p>For 200/208/220/230/240 VAC models, you may choose the following selection for acceptable input voltage range:</p> <p>110/300 flashing in turns: The acceptable input voltage range is from 110V to 300V.</p> <p>160/260 flashing in turns: The acceptable input voltage range is from 160V to 260V.</p> <p>170/270 flashing in turns: The acceptable input voltage range is from 170V to 270V.</p> <p>For 100/110/115/120 VAC models, you may choose the following selection for acceptable input voltage range:</p> <p>55/150 flashing in turns: The acceptable input voltage range is from 55V to 150V.</p> <p>80/130 flashing in turns: The acceptable input voltage range is from 80V to 130V.</p> <p>85/135 flashing in turns: The acceptable input voltage range is from 85V to 135V.</p>

- 00: Exit setting

3-6. Operating Mode Description

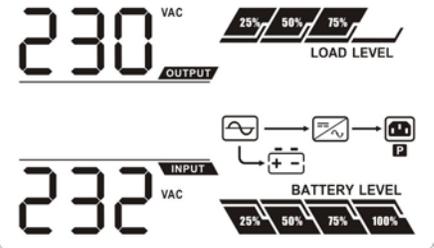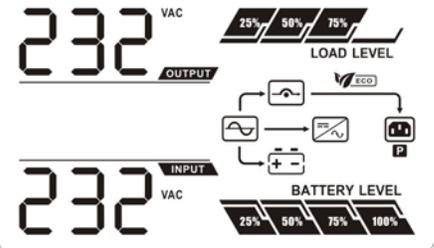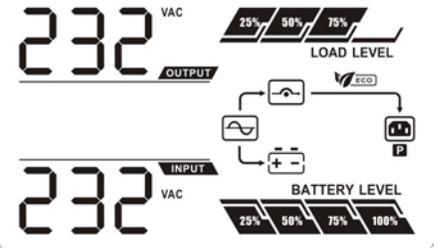Operating mode	Description	LCD display
Online mode	When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery in online mode.	
ECO mode (Efficiency Corrective Optimizer)	When the input voltage is within setting range ($\pm 3\%V_o$ max), UPS will bypass voltage to output for energy saving. PFC and INVERTER are still active in this mode.	
AECO mode (Advanced Efficiency Corrective Optimizer)	When the input voltage is within setting range ($\pm 3\%V_o$ max), UPS will bypass voltage to output for energy saving. PFC and INVERTER are off in this mode.	

Frequency Converter mode	When input frequency is within 40 Hz to 70 Hz, the UPS can be set at a constant output frequency, 50 Hz or 60 Hz. The UPS will still charge battery under this mode.	
Battery mode	When the input voltage is beyond the acceptable range or power failure occurs and alarm is sounding every 4 seconds, UPS will backup power from battery.	
Bypass mode	When input voltage is within acceptable range but UPS is in overload, UPS will enter bypass mode or bypass mode can be set by front panel. Alarm sounds every 10 seconds.	
Standby mode	UPS is powered off and without output power, but the battery still can be charged.	
Fault mode	The UPS is in fault mode when no output power is supplied from the UPS and the fault icon flashes on the LCD display, although the UPS information can be displayed on the screen.	

3-7. Faults Reference Code

Fault event	Fault code	Icon	Fault event	Fault code	Icon
Bus start fail	01	x	Inverter voltage Low	13	X
Bus over	02	x	Inverter output short	14	
Bus under	03	x	Battery voltage too high	27	
Bus unbalance	04	x	Battery voltage too low	28	
Bus short circuited	05	x	Over temperature	41	X
Inverter soft start fail	11	x	Over load	43	
Inverter voltage high	12	x			

3-8. Warning indicator

Warning	Icon (flashing)	Alarm
Low Battery	 	Sounding every second
Overload	 	Sounding twice every second
Battery is not connected	 	Sounding every second
Over Charge	 	Sounding every second
Site Fault	SF 	Sounding every second
EPO enable	EP 	Sounding every second
Over temperature	ET 	Sounding every second
Charger failure	CH 	Sounding every second
Battery fault	 	Sounding every second
Out of bypass voltage range	 	Sounding every second
Bypass frequency unstable	FU 	Sounding every second
EEPROM error	EE 	Sounding every second

4. Troubleshooting

If the UPS system does not operate correctly, use the table below to check problem.

Symptom	Possible cause	Remedy
No indication and alarm even though the main is normal.	The AC input power is not connected properly.	Check if input power cord firmly connected to the mains.
	The AC input is connected to the UPS output.	Plug AC input power cord to AC input correctly.
The icon  is flashing and the warning code EP is lighting on LCD display. Alarm is sounding every second.	EPO function is activated.	Set the circuit in closed position to disable EPO function.
The icon  is flashing and SF is lighting on LCD display. Alarm is sounding every second.	Line and neutral conductors of UPS input are reversed.	Rotate mains power socket by 180° and then connect to UPS system.
The icon  and  flashing on LCD display and alarm is sounding every second.	The external or internal battery is incorrectly connected.	Check if all batteries are connected properly.
Fault code is shown as 27 and the icon  is lighting on LCD display and alarm is continuously sounding.	Battery voltage is too high or the charger is at fault.	Contact the manufacturer.
Fault code is shown as 28 and the icon  is lighting on LCD display and alarm is continuously sounding.	Battery voltage is too low or the charger is fault.	Contact the manufacturer.

Symptom	Possible cause	Remedy
The icon  and  is flashing on LCD display and alarm is sounding twice every second.	UPS is overloaded	Remove excess loads from UPS output.
	UPS is overloaded. Devices connected to the UPS are fed directly by the electrical network via the Bypass.	Remove excess loads from UPS output.
	After repetitive overloads, the UPS is locked in the Bypass mode. Connected devices are fed directly by the mains.	Remove excess loads from UPS output first. Then shut down the UPS and restart it.
Fault code is shown as 43 and The icon  is lighting on LCD display and alarm is continuously sounding.	The UPS shut down automatically because of overload at the UPS output.	Remove excess loads from UPS output and restart it.
Fault code is shown as 14 and the icon  is lighting on LCD display. Alarm is continuously sounding.	The UPS shut down automatically because short circuit occurs on the UPS output.	Check output wiring and if connected devices are in short circuit status.
Fault code is shown as 01, 02, 03, 04, 11, 12, 13 and 41 on LCD display and alarm is continuously sounding.	A UPS internal fault has occurred. There are two possible results: 1. The load is still supplied, but directly from AC power via bypass. 2. The load is no longer supplied by power.	Contact the manufacturer
Battery backup time is shorter than nominal value	Batteries are not fully charged	Charge the batteries for at least 5 hours and then check capacity. If the problem still persists, consult the manufacturer.
	Batteries defective	Contact the manufacturer to replace the batteries.
Fault code is shown as 05 on LCD display. At the same time, alarm is continuously sounding and output is cut off.	A UPS internal fault has occurred and BUS is short circuited.	Consult the manufacturer. If the UPS power is on again before repair, the DC/DC mosfet will be damaged.

5. Storage and Maintenance

Operation

The UPS system contains no user-serviceable parts. If the battery service life (3-5 years at 25°C ambient temperature) has been exceeded, the batteries must be replaced. In this case, please contact the manufacturer for replacement battery packs.



Be sure to deliver the spent battery to a recycling facility.

Storage

Before storing, charge the UPS for 5 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:

Storage Temperature	Recharge Frequency	Charging Duration
-25°C - 40°C (-13°F - 104°F)	Every 3 months	1-2 hours
40°C - 45°C (104°F - 113°F)	Every 2 months	1-2 hours

6. Specifications

MODEL (SCV)		10001	10001-LB	20001	20001-LB	30001	30001-LB
Capacity	VA	1000 VA	900 VA	2000 VA	1700 VA	3000 VA	2500 VA
	W	900 W	810W	1800 W	1530 W	2700 W	2250 W
INPUT							
Voltage Range	Rated voltage	100VAC-120VAC					
	Low Line Transfer	80 VAC/70 VAC/60 VAC/55 VAC \pm 5 % (based on load percentage 100%-80% / 80%-70% / 70%-60% / 60%-0)					
	Low Line Comeback	85 VAC/75 VAC/65 VAC/60 VAC \pm 5 %					
	High Line Transfer	150 VAC \pm 5 %					
	High Line Comeback	142 VAC \pm 5 %					
Frequency Range		50Hz/ 60Hz					
Power Factor		\geq 0.99 @normal voltage					
OUTPUT							
Output Voltage		100*/110*/115*/120VAC					
AC Voltage Regulation		\pm 1%					
Frequency Range		47 ~ 53 Hz or 57 ~ 63 Hz (Synchronized Range)					
Frequency Range		50Hz \pm 0.5% or 60Hz \pm 0.5% (Bat. Mode)					
Current Crest Ratio (CF)		5:1 (max.)					
Harmonic Distortion (THDU)		\leq 2% (Linear load) 8% max (Batt. mode before shut down)					
Transfer Time	AC to DC	Zero					
	Inverter to Bypass	4 ms (Typical)					
Waveform (Batt. Mode)		Pure Sine wave					
EFFICIENCY							
AC Mode		86% (typical), 88% (peak)			88% (typical), 90% (peak)		
Battery Mode		83% (typical), 86% (peak)			85% (typical), 88% (peak)		
BATTERY							
Battery Type		12V/9Ah	Depending on application	12V/9Ah	Depending on application	12V/9Ah	Depending on application
Numbers		2		4		6	
Typical Recharge Time		4 hours recover to 90% capacity (for standard model only)					
Charging Current (max.)		1 A	6A or 4A	1 A	6A or 4A	1 A	6A or 4A
Charging Voltage		27.4 VDC \pm 1%		54.7 VDC \pm 1%		82.1VDC \pm 1%	
INDICATORS							
LCD		UPS status, Load level, Battery level, Input/Output/battery info, Discharge time and Fault indicators					
ALARM							
Battery Mode		Sounding every 4 seconds					
Low Battery		Sounding every second					
Overload		Sounding twice every second					
Fault		Continuously sounding					
PHYSICAL							
Dimension, DxWxH (in)		15 x 17.2 x 3.46		18.9 x 17.2 x 3.46		23.6 x 17.2 x 3.46	
Net Weight (lbs)		29.1	20.2	47.2	27.5	65.2	33.3
ENVIRONMENT							
Humidity		20-90 % RH @ 0- 40°C (non-condensing) (32°F - 104°F)					
Noise Level		Less than 50dBA @ 1 Meter					
MANAGEMENT							
Smart RS-232/USB		Supports Windows 2000/2003/XP/Vista/2008/7, Linux, Unix, and MAC					
Optional SNMP		Power management from SNMP manager and web browser					

*Derate capacity to 95% when the output voltage is adjusted to 115VAC. Derate capacity to 90% when the output voltage is adjusted to 110VAC. Derate capacity to 80% when the output voltage is adjusted to 100VAC.

MODEL (SCV)		10002	10002-LB	20002	20002-LB	30002	30002-LB
Capacity	VA/W	1000 VA / 900 W		2000 VA / 1800 W		3000 VA / 2700 W	
INPUT							
Voltage Range	Rated Voltage	220-240 VAC					
	Low Line Transfer	160 VAC/140 VAC/120 VAC/110 VAC ± 5 % (based on load percentage 100%-80% / 80%-70% / 70%-60% / 60%-0)					
	Low Line Comeback	170 VAC / 150 VAC / 130 VAC / 120 VAC ± 5 %					
	High Line Transfer	300 VAC ± 5 %					
	High Line Comeback	290 VAC ± 5 %					
Frequency Range		40Hz ~ 70Hz					
Power Factor		≧0.99 @normal voltage					
OUTPUT							
Output Voltage		200/208/220/230/240 VAC					
AC Voltage Regulation		± 1%					
Frequency Range		47 ~ 53 Hz or 57 ~ 63 Hz (Synchronized Range)					
Frequency Range		50Hz ± 0.5% or 60Hz ± 0.5% (Bat. Mode)					
Current Crest Ratio (CF)		5:1 (max.)					
Harmonic Distortion (THDU)		≧ 2% THD (Linear load) 6% max (battery mode before shutdown)					
Transfer Time	AC to DC	Zero					
	Inverter to Bypass	4 ms (Typical)					
Waveform (Batt. Mode)		Pure Sinewave					
EFFICIENCY							
AC Mode		87%		88%		88%	
Battery Mode		85%		86%		85%	
ECO Mode		94%		95%		97%	
BATTERY							
Battery Type	12V/9Ah	Depending on application	12V/9Ah	Depending on application	12V/9Ah	Depending on application	Depending on application
Numbers	2		4		6		
Typical Recharge Time		4 hours recover to 90% capacity (for standard model only)					
Charging Current (max.)	1 A	1A/2A/ 4A/8A	1 A	1A/2A/ 4A/8A	1 A	1A/2A/ 4A/8A	
Charging Voltage		27.4 VDC ± 1%		54.7 VDC ± 1%		82.1VDC ± 1%	
INDICATORS							
LCD	UPS status, Load level, Battery level, Input/Output/battery info, Discharge time and Fault indicators						
ALARM							
Battery Mode	Sounding every 4 seconds						
Low Battery	Sounding every second						
Overload	Sounding twice every second						
Fault	Continuously sounding						
PHYSICAL							
Dimension, DxWxH (in)	15 x 17.2 x 3.56		18.9 x 17.2 x 3.46		23.6 x 17.2 x 3.46		
Net Weight (lbs)	29.1	20.2	47.2	27.2	65.2	33.3	
ENVIRONMENT							
Humidity	20-90 % RH @ 0- 40°C (non-condensing) (32°F - 104°F)						
Noise Level	Less than 50dBA @ 1 Meter						
MANAGEMENT							
Smart RS-232/USB	Supports Windows 2000/2003/XP/Vista/2008/7, Linux, Unix, and MAC						
Optional SNMP	Power management from SNMP manager and web browser						

* Derate capacity to 80% when the output voltage is adjusted to 200VAC/208VAC.

Battery Pack Specification

Model	SCV-BAT-1K	SCV-BAT-2K	SCV-BAT-3K
Used with UPS Models	1K	2K	3K
Battery Type	12V 9Ah	12V 9Ah	12V 9Ah
Battery Numbers	4	8	12
Dimensions (DxWxH)	14.96 x 17.24 x 3.46	18.9 x 17.24 x 3.46	23.62 x 17.24 x 3.46
Net Weight(LBS)	37.7	63.93	90.83

NOTE: Battery cabinet should be used with corresponded UPS.